Superveloce 800 Front Ring DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

Fairing removal.

1. Remove the 5 screws shown in ***Figure 1*** from both sides of the bike and remove plastic duct cover for wire access**.**
2. Remove screws shown in ***Figures 2 through 6*****.**

Light Install

1. Install the light with the larger round indentions facing down and the smaller indentions up. **(*Figure 7)***
   Run the wires between the projector housing and plastic ring ***(Figure 8)***
2. Use painters tape or equivalent to hold the ring in place while connecting the wires. ***(Figure 9)***
3. Locate the wire with the label "P" on it that runs to the existing DRL. Located near the headlight on the right side of the bike. ***(Figure 10)***
4. Install 2 posi-taps on the positive wire (red). Connect any red wire from the front ring DRL to one of the posi-taps. Twist the other two red wires together and connect them to the other posi-tap. ***(Figure 11 & 12)***
   (If the front DRL is being combined with the AB Moto side DRLs, only make three taps onto the "P" wire by combining two wires to connect to one posi-tap)
5. All negative wires (black) from the front ring DRL can either be connected to the "P" negative wire, or to the negative wires for the signals. (**Dark blue** wire indicates negative for MV models)
6. Run the yellow wires for the front ring signals to their respective left and right positive wires of the existing signals. (labeled "L" and "R" for both the existing signal wires and AB Moto ring DRL). Posi-taps can be installed on either side of the white 2-Pin JST connector.
7. Use the existing MV rubber wire ties to clean up loose wires. ***(Figure 13)***

Superveloce 800 Front Ring DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

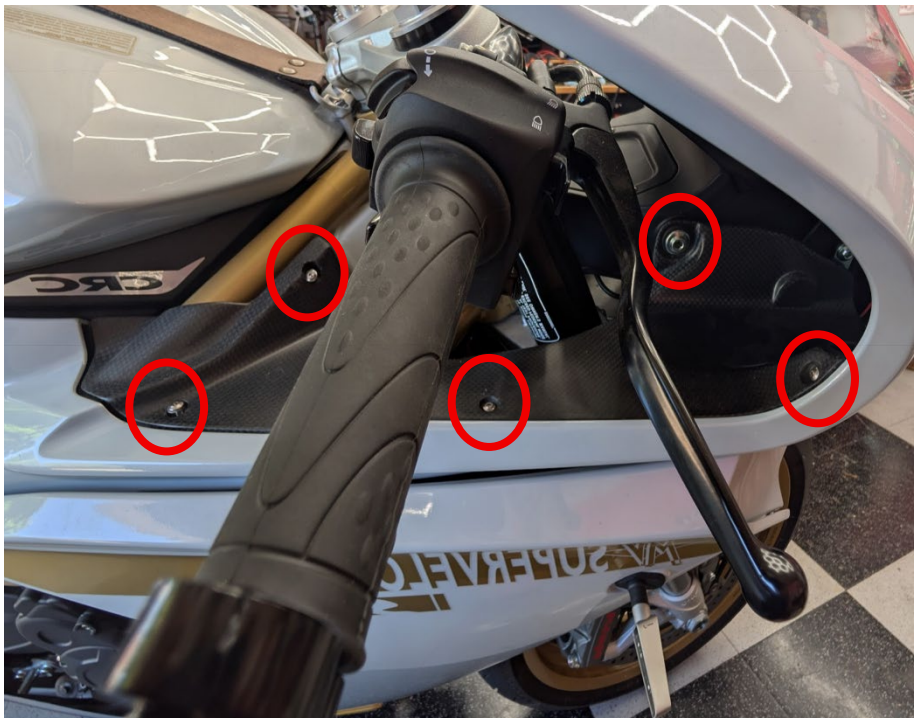


Figure 1



Figure 2



Figure 3

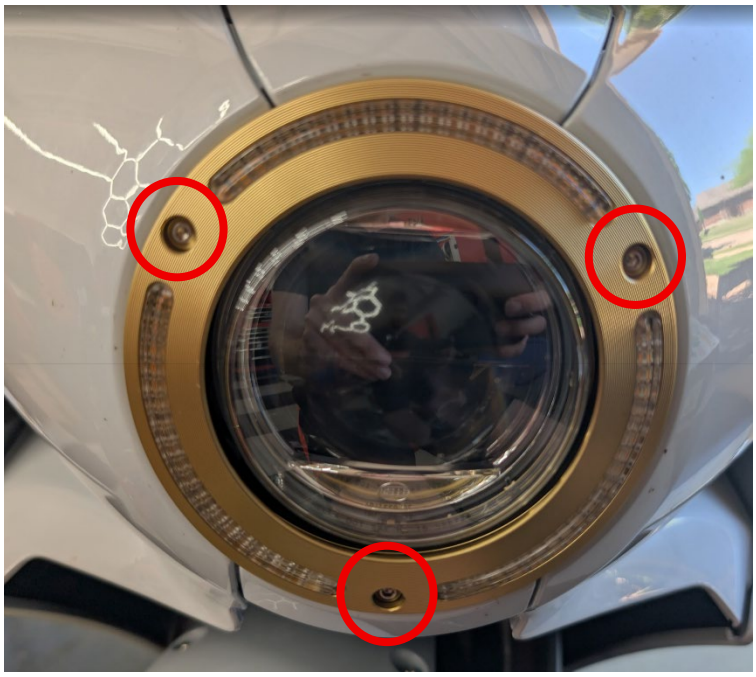


Figure 4

Superveloce 800 Front Ring DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

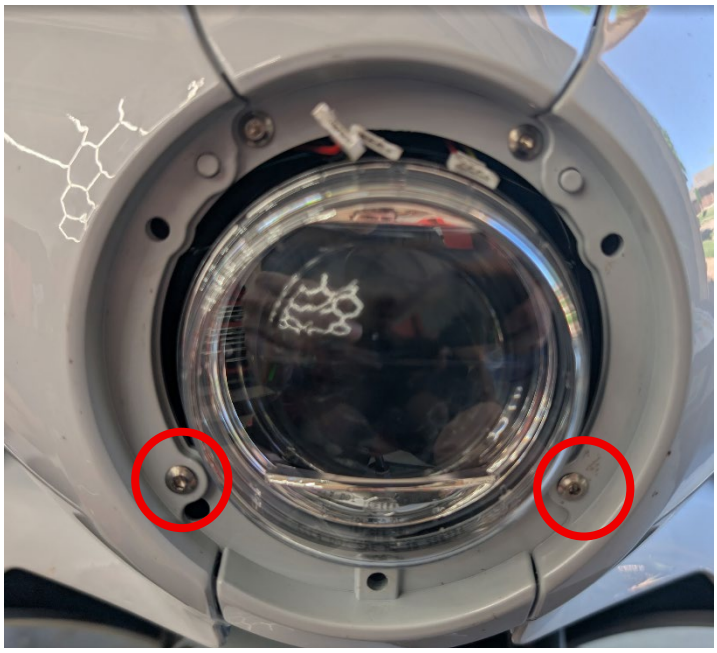


Figure 5



Figure 6

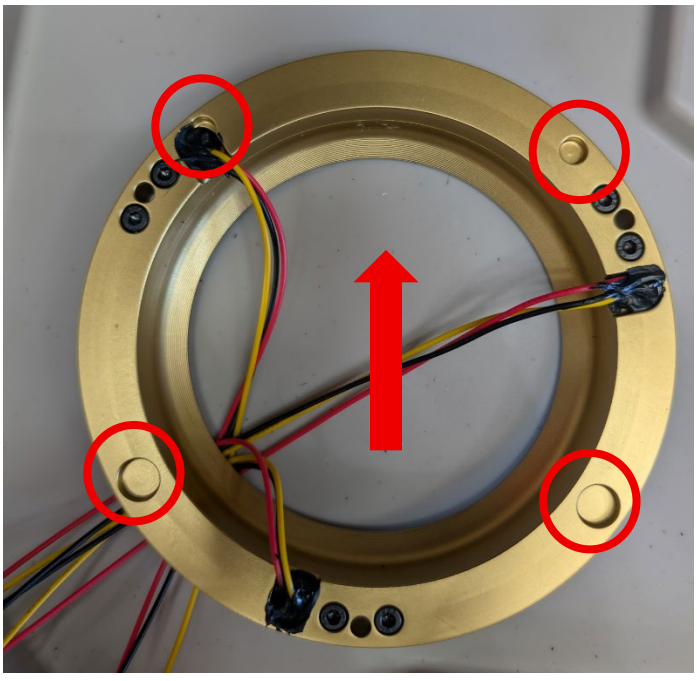


Figure 7

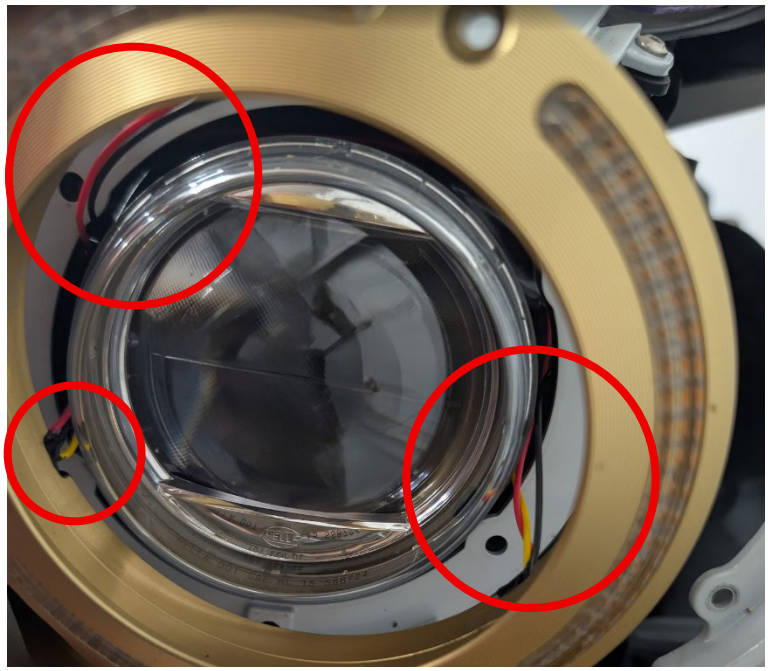


Figure 8

Superveloce 800 Front Ring DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

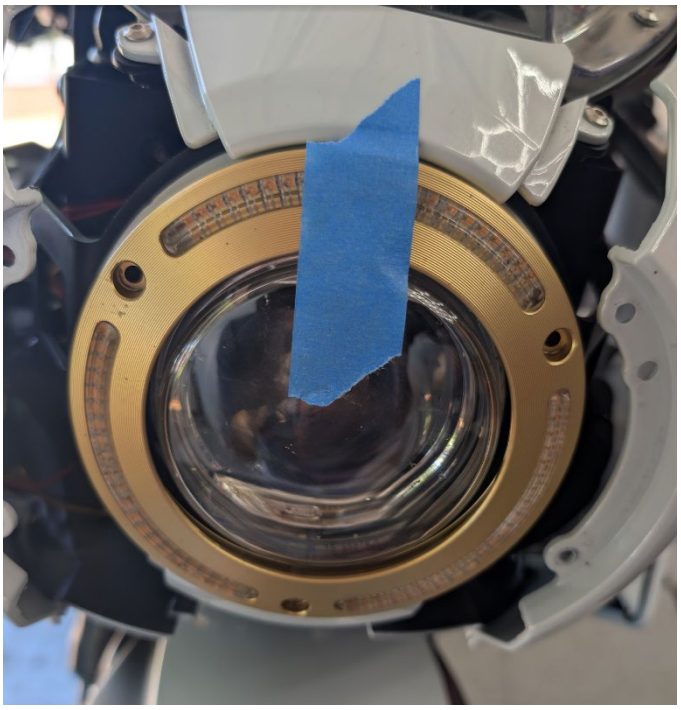


Figure 9



Figure 10

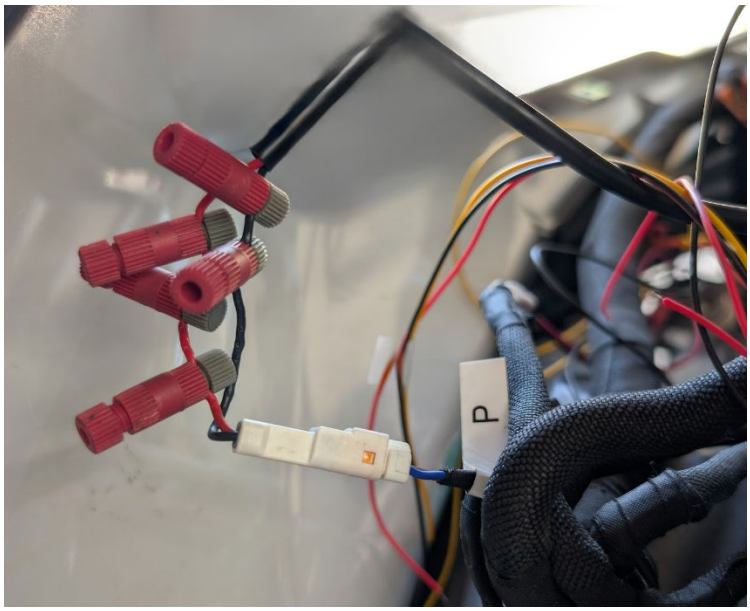


Figure 11

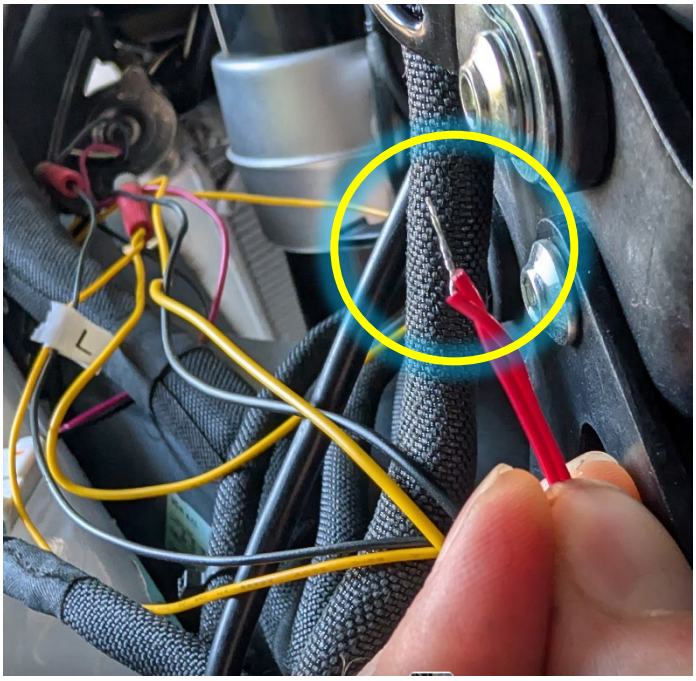


Figure 12

Superveloce 800 Front Ring DRL Instructions

Need help with installations? Contact us at install@abmoto.store

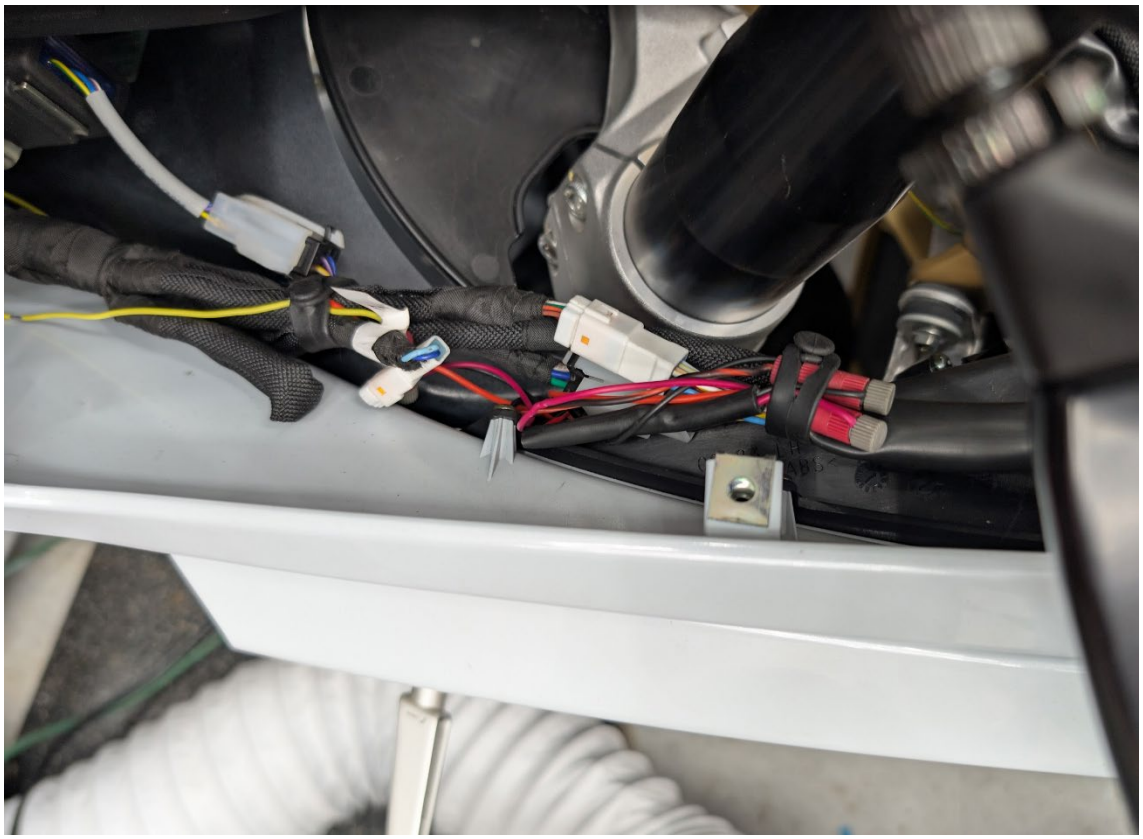


Figure 13