# Superveloce 800 Side Fairing DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

## Fairing removal.

1. Remove the 5 screws shown in ***Figure 1*** and remove the duct cover**.**
2. Remove screw #2 and loosen screw #1. They both can be removed if the entire fairing needs to come off for easier access, otherwise keep screw #1 on to secure the fairing but allow enough play to install the light. ***(Figure 2)***
3. Remove screws shown in ***Figures 3 through 7.***
4. Pull the rear of the fairing away from bike. ***(Figure 8)***

## Light Install

1. Remove the two screws holding in the plastic insert. Replace with the DRL light. **(*Figure 9)***
2. Use the included wire holder and attach it close to the upper portion of the fairing. Run the wire up through towards the top of the fairing. ***(Figure 10)***
3. Find the wire near the headlight on the right side of the bike labeled “P” that runs to the DRL above the headlight. Tap into it using one of the include Posi-taps. Both red wires of the two side DRLs can be run off of one tap as shown in ***Figure 11.*** But two taps can be made for either side DRL if necessary. Run the left side DRL red wire underneath the top cover / behind the headlight as shown in ***Figure 13.***
4. Using two Posi-taps, tap into the red and black wire of the front signals and connect the yellow to the front signals red wire and the black wire to the front signal black wire. **(*Figure 12)***
5. Use the existing rubber wire ties to clean up the excess wire of the side DRLs. ***(Figure 13)***

# Superveloce 800 Side Fairing DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

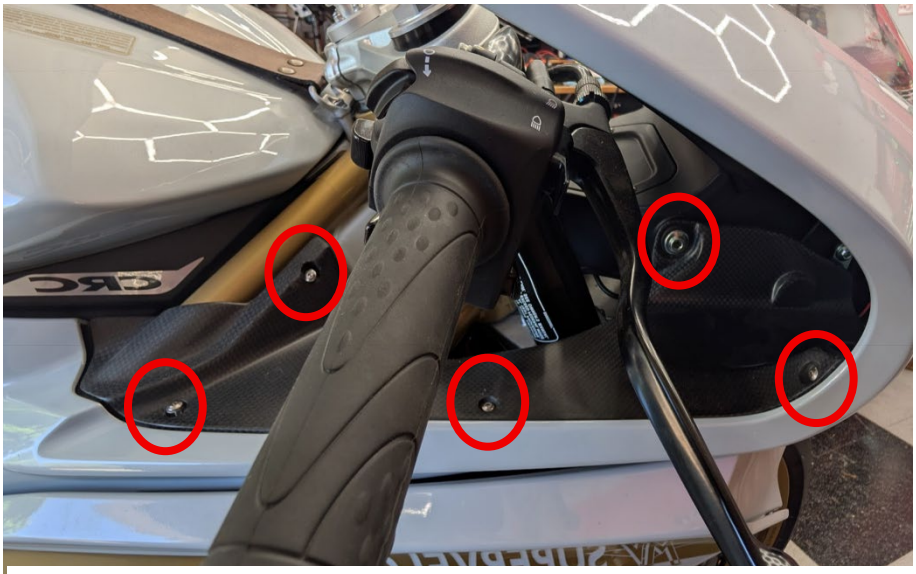
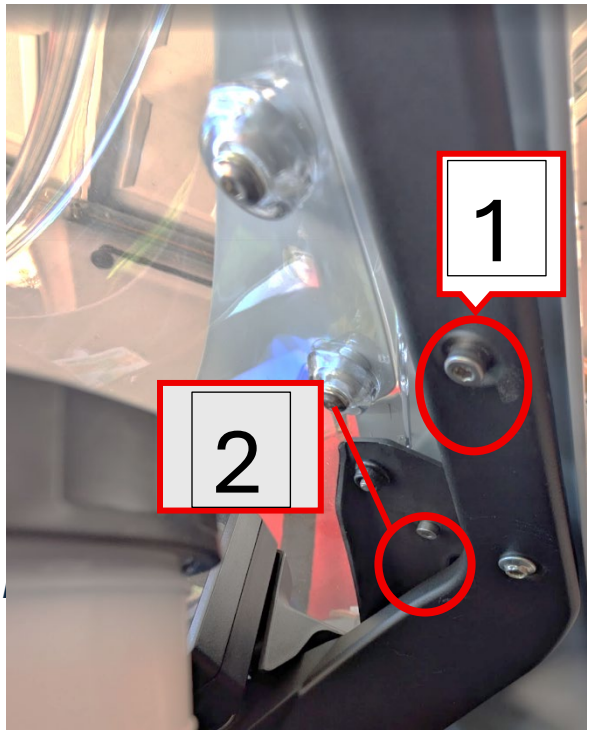


*Figure 1*





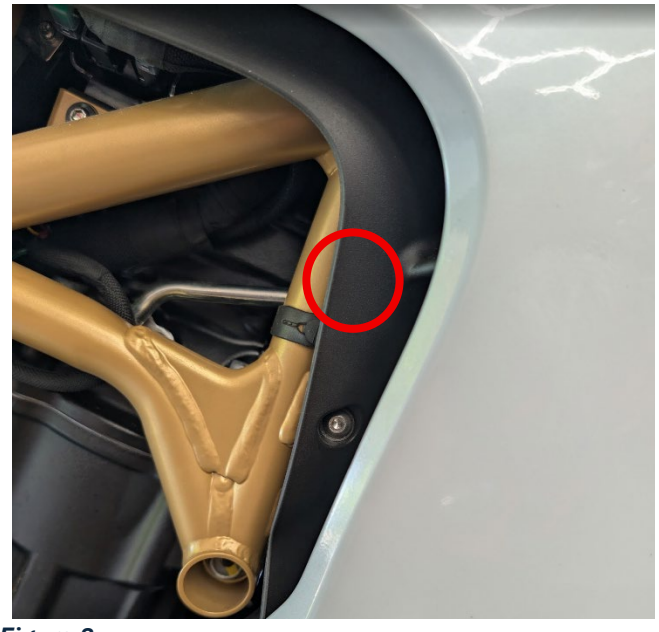



*Figure 3*




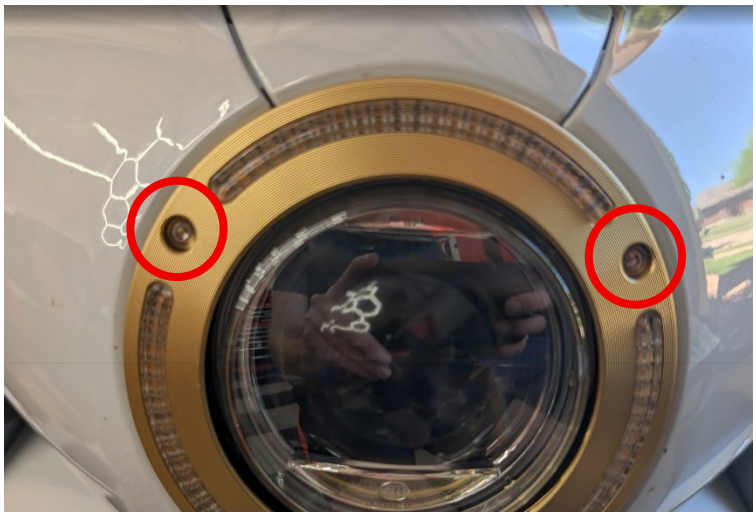


*Figure 4*



# Superveloce 800 Side Fairing DRL Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

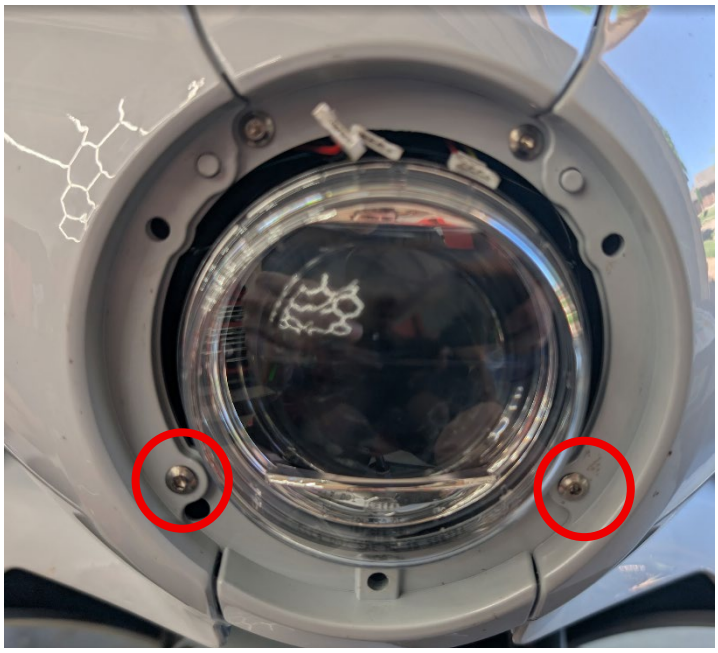


*Figure 5*

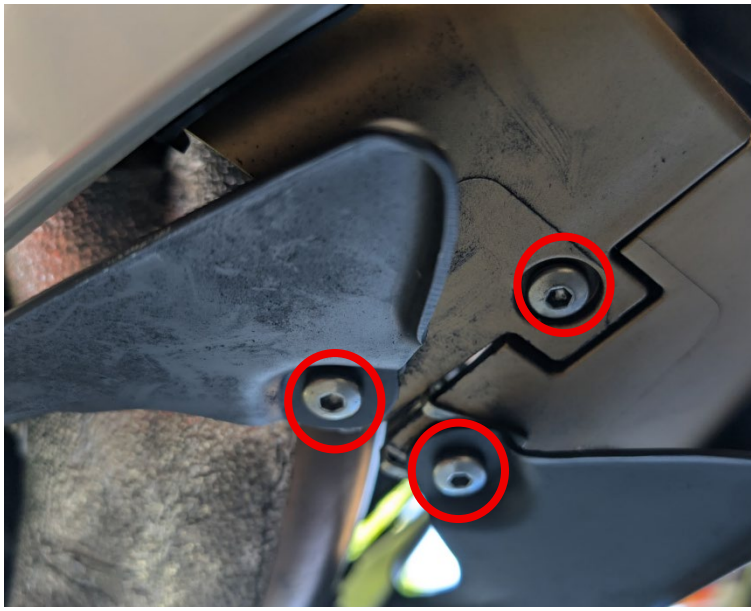


*Figure 6*

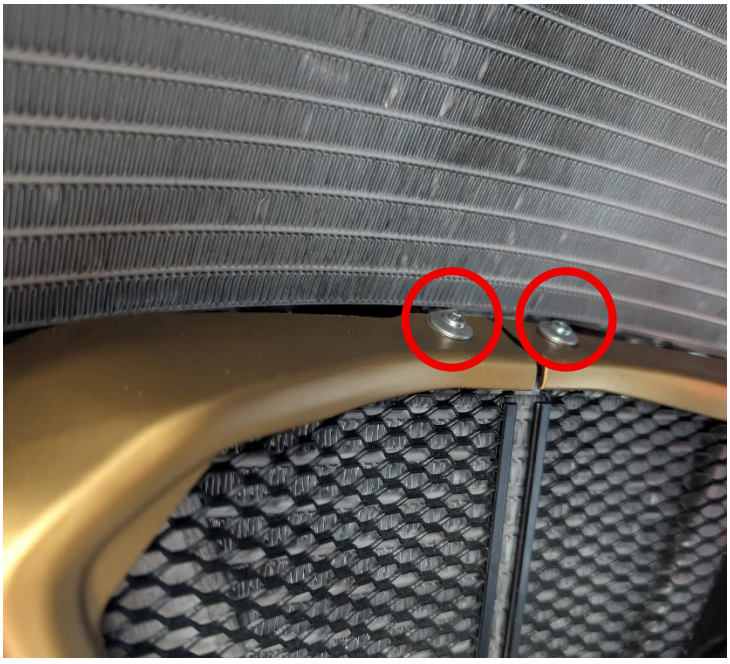


*Figure 7*



*Figure 8*

# Superveloce 800 Side Fairing DRL Instructions

Need help with installations? Contact us at install@abmoto.store

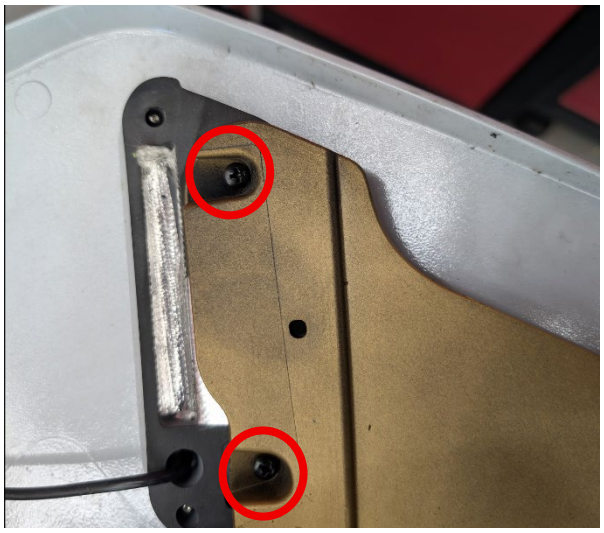


*Figure 9*




*Figure 10*



*Figure 11*

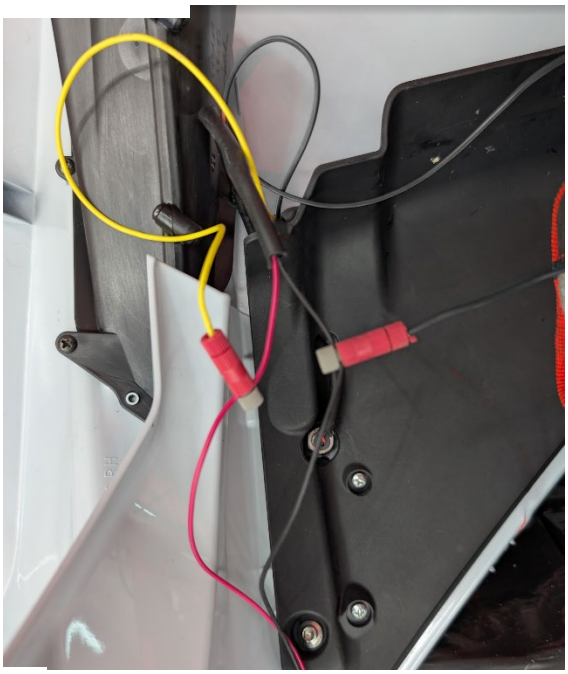


*Figure 12*

# Superveloce 800 Side Fairing DRL Instructions

Need help with installations? Contact us at install@abmoto.store

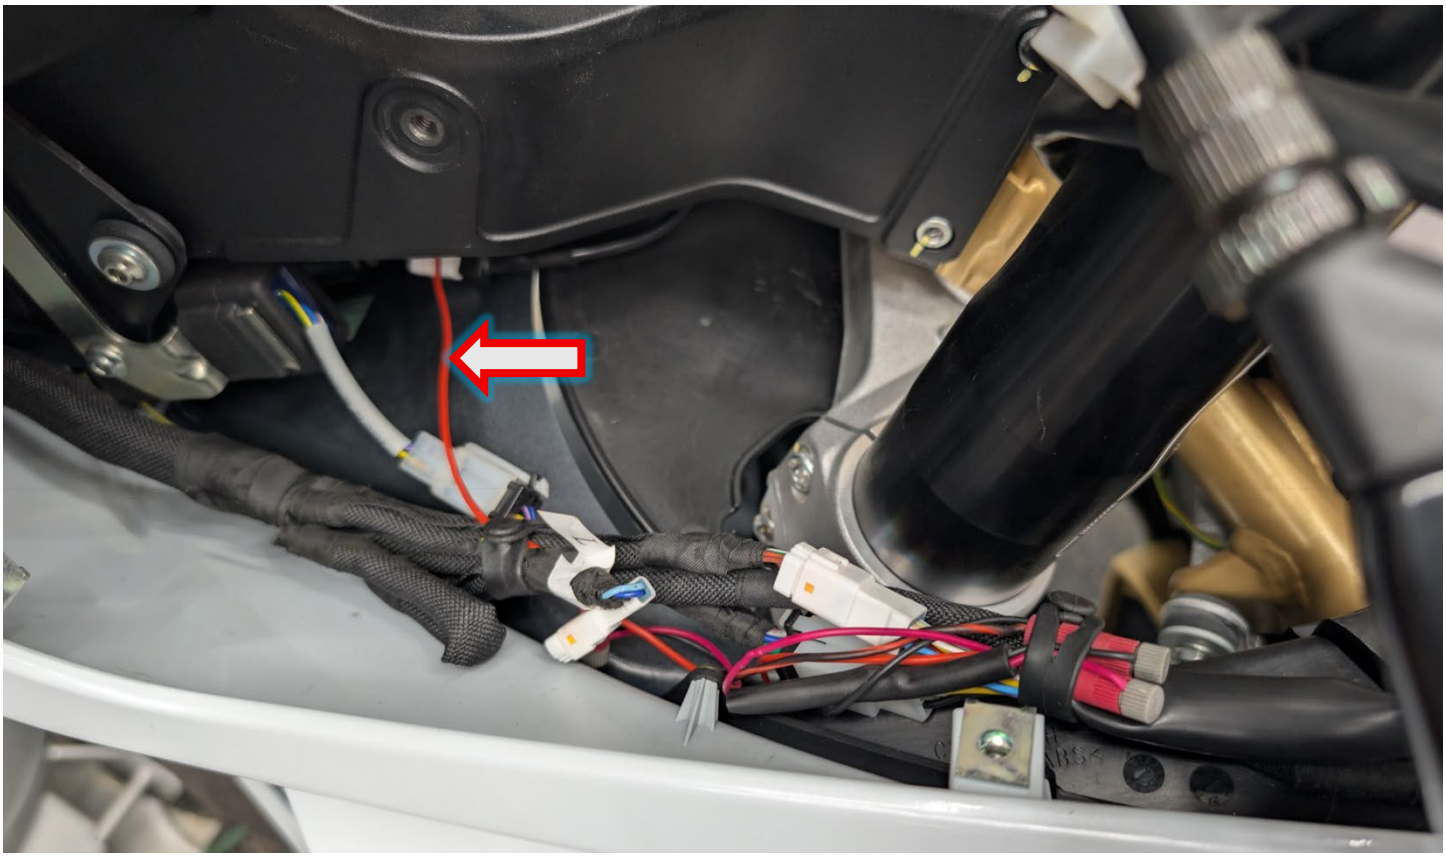


*Figure 13*