Brutale 1000/Rush Phone Mount Instructions

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

1. Undo the four screws holding the screen bracket. ***(Figure1)***
2. Remove the wire connector on the back of the screen ***(Figure 2)***
3. Remove the four screws holding the screen to the screen bracket ***(Figure 3)***
4. Place the phone mount and the back of the screen bracket and use the provided four screws to attach the phone mount and bracket back to the screen. ***(Figure 4)***
5. Use either of the two provided Quad Lock attachment pieces provided to attach any Quad Lock phone mount. ***(Figure 5 & 6)***
6. If using SP Connect, remove the gear ***(Figure 7 & 8)*** from any of the following SP Connect mounts:
    a. Bar Clamp Mount Pro
    b. Brake Mount
    c. Clutch Mount Pro
    d. Mirror Mount Pro

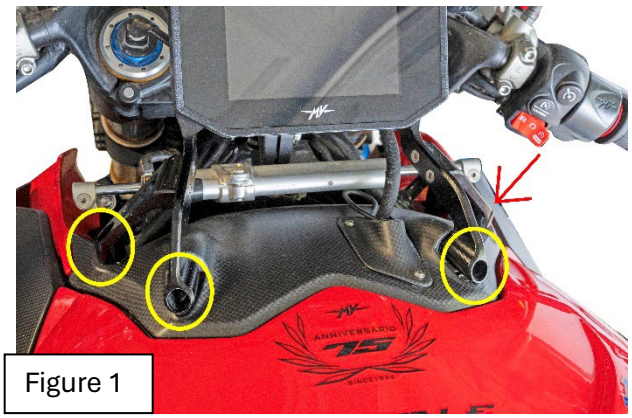


Figure 1



Figure 2

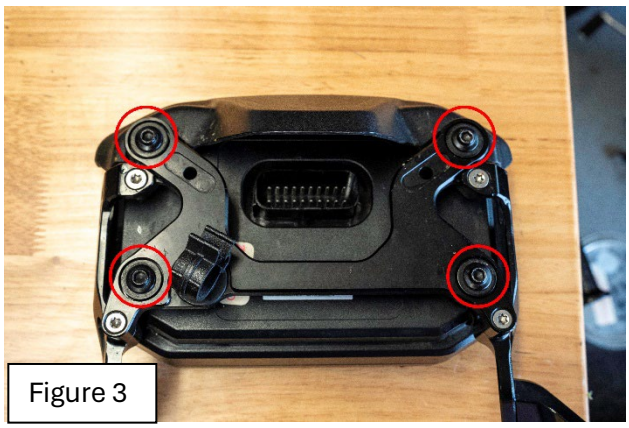


Figure 3

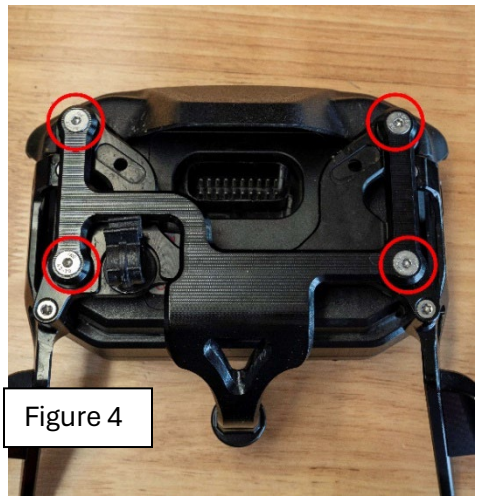


Figure 4

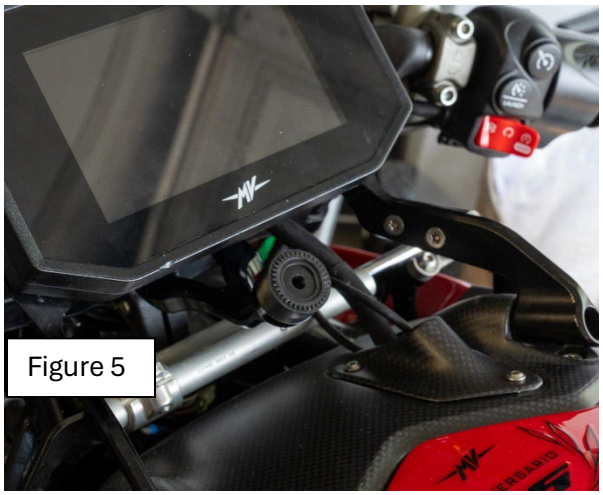


Figure 5

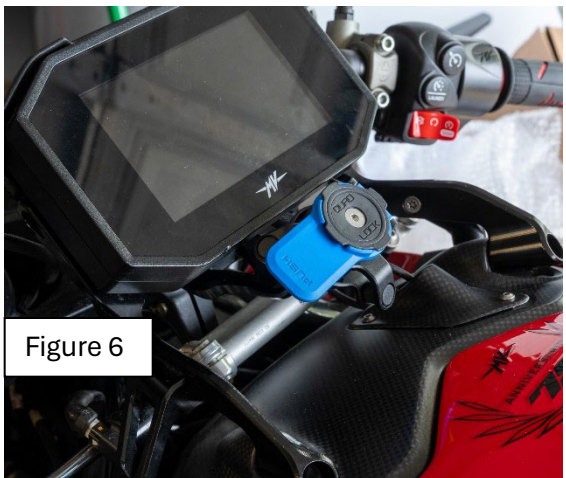


Figure 6

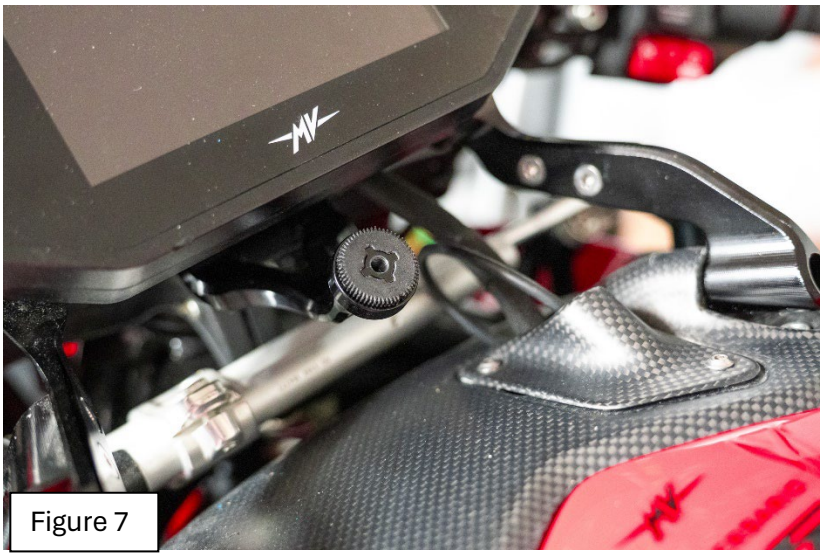


Figure 7



Figure 8