Brutale / Dragster 800 Phone Mount

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

1. Remove the two screws from the steering damper bracket. ***(Figure1)***
2. Place the two post of the phone mount onto the steering damper bracket. Place the top half of the phone mount onto the bottom bridge. Adjust the middle portion accordingly by loosening the middle M3 screw. Secure the top half with the two provided M5x40mm bolts. **Loctite Recommended *(Figure 2)***
3. Place the included phone mount adapter onto the + on the top and attach your preferred phone mount.

Figure 1

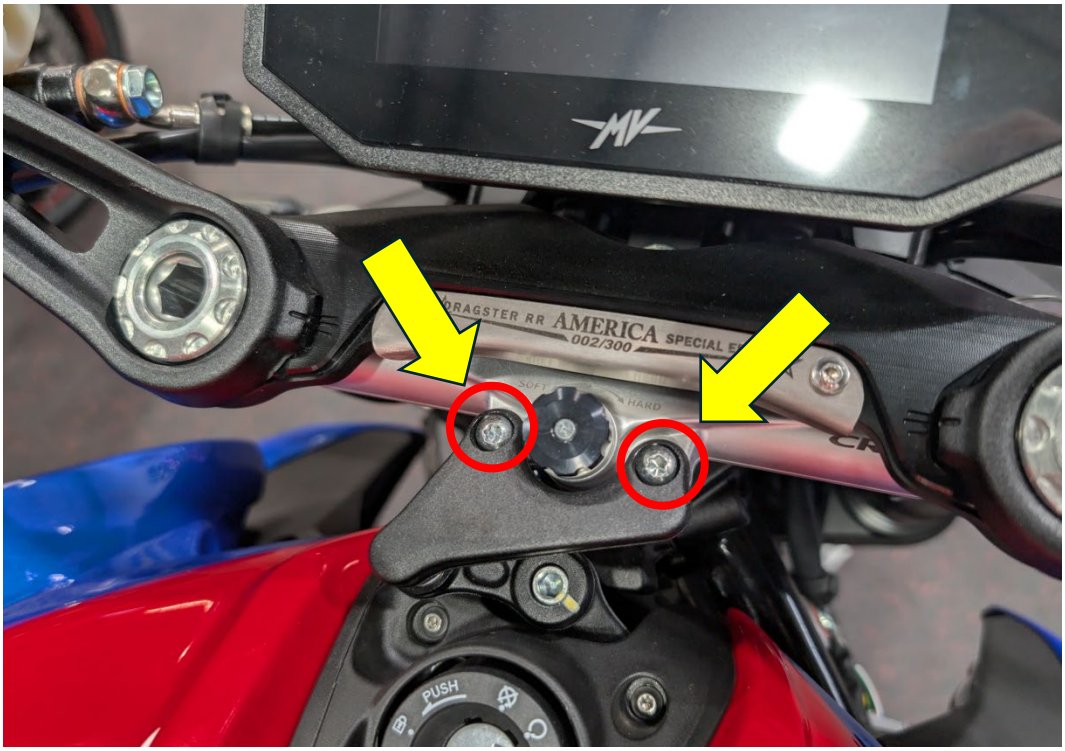


Figure 2

