F3 Tucked Tail Tidy Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS

License Bracket Installation

1. Install the license plate, license light, and (if applicable) signal bracket ***(Figure 1)***
2. Remove the two screws on the underside of the bike. ***(Figure 2)***
3. Place the spacer between the bracket and the bike with the long end of the spacer towards the front of the bike and short end towards the back ***(Figure 3)***
4. Using one of the two provided countersunk screws, attach the bracket where the two previously removed screws were. **Loctite recommended.**
5. Run the wires from the license light and signals between the gap of the regulator and plastic tail into the rear compartment. ***(Figure 4)***
6. Fasten the other countersunk screw and spacer to the opposite side of the bracket. ***(Figure 5)***

Block Plate Installation

1. Open the rear passenger seat cover and remove the rider seat to access the rear compartment.
2. Remove the bracket holding on the passenger seat and the rear side fairings to access the plastic tray in step 3. ***(Figure 6)***
3. Remove the plastic tray and lock mechanism. ***(Figure 6 & 7)***
4. Attach the block plate using the 4 provided M5 screws. Secure the 2 screws in the back by sliding a 3mm allen key with ball style end through the hole that the lock covered. ***(Figure 8)***

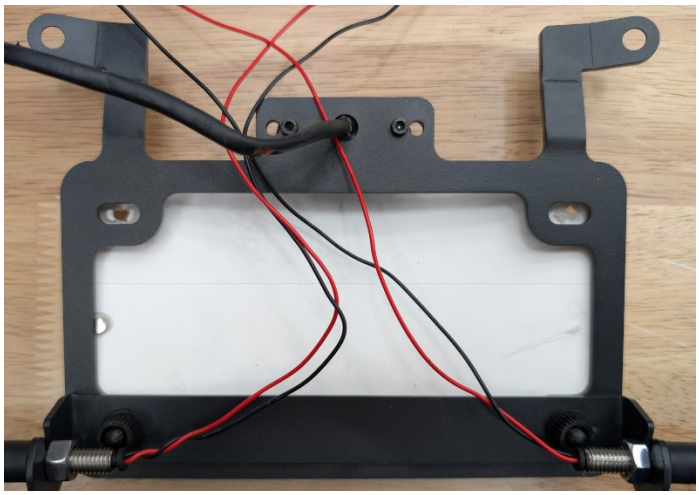


Figure 1

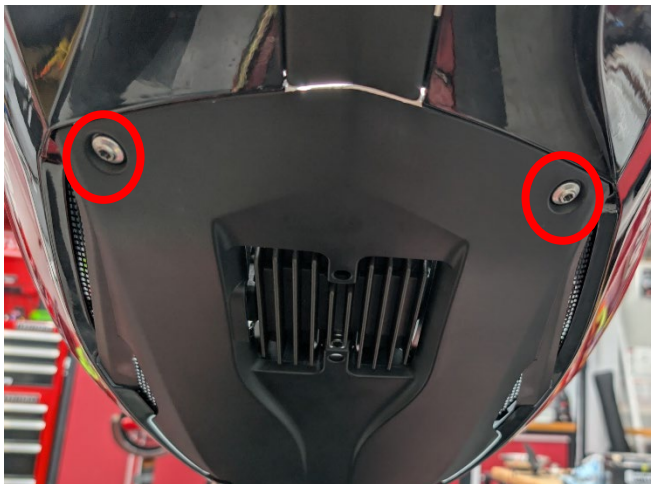


Figure 2



Figure 3

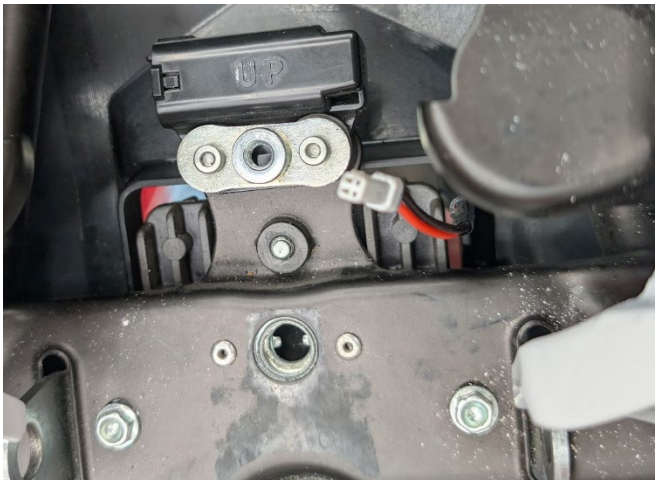


Figure 4

F3 Tucked Tail Tidy Instructions

Need help with installations? Contact us at install@abmoto.store

ABMOTO.STORE

ABMOTO.US

@AB_MOTORWORKS



Figure 5

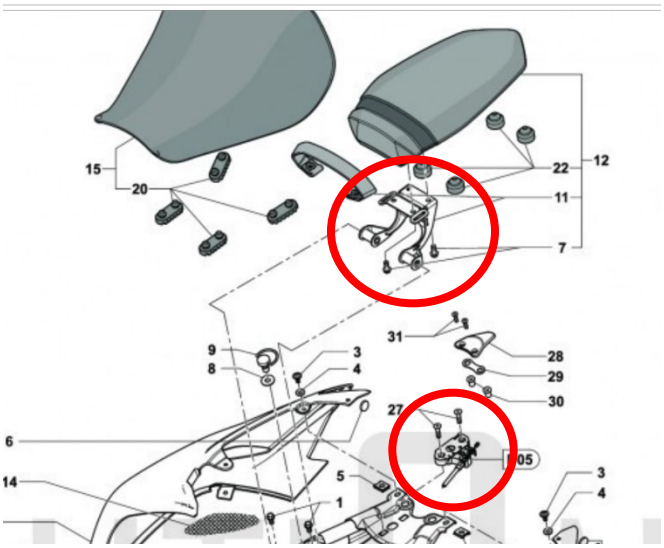


Figure 6

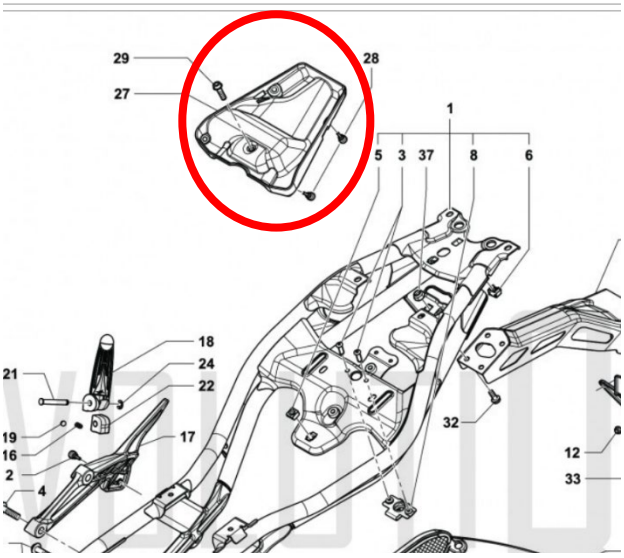


Figure 7

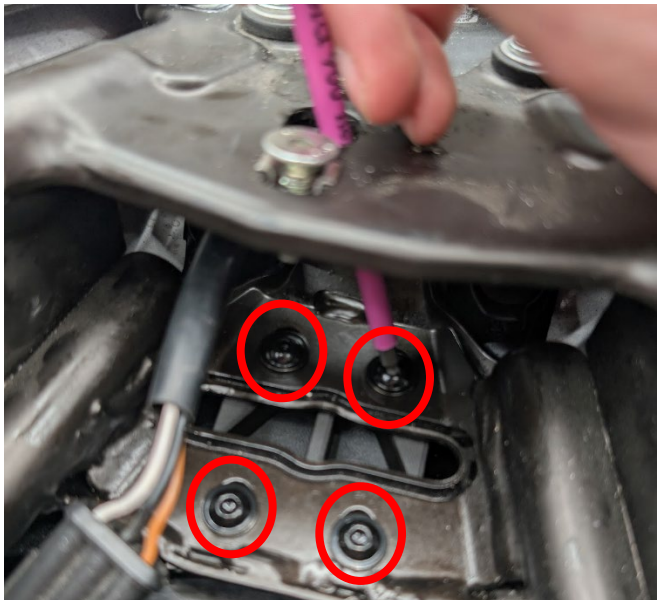


Figure 8