

INSTALLATION

1.
INSTALL PLASTIC WASHER AND 3MM NUT WITHOUT NYLON LOCK ABOUT MIDWAY DOWN ON ALL 4 L-BOLTS




2.
INSTALL THE L-BOLTS IN 4 OF THE 6 HOLES ON THE STEM NUT

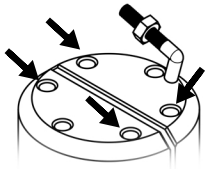


3.
LOOSELY HAND TIGHTEN THE 4 L-BOLTS. SLIDE PHONE MOUNT OVER THE 4 POST.

(IF THE PHONE MOUNT IS NOT SLIDING ON EASILY AND FLUSH WITH THE STEM NUT, THE L-BOLTS MAY BE TOO TIGHT)

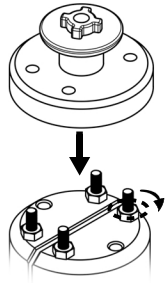


4.
INSTALL THE FOUR 3MM LOCK NUTS ON TOP OF THE POST AND TIGHTEN WITH INCLUDED WRENCH.

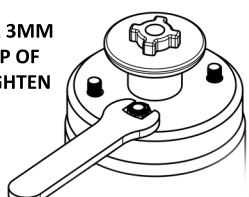

*MAKE SURE TO TIGHTEN UNTIL THE THREAD LOCK IN THE TOP OF THE NUT IS ENGANGED. OTHERWISE THE NUTS MAY COME LOSE.

5.
IF USING THE QUADLOCK CASE SYSTEMS, INSTALL THE INCLUDED ADAPTER.

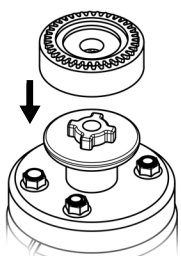

6.
IF USING THE SP CONNECT CASE SYSTEMS, INSTALL THE INCLUDED GEAR COMPATIBLE WITH THE FOLLOWING SP CONNECT MOUNTS

BAR CLAMP MOUNT PRO
BRAKE MOUNT
CLUTCH MOUNT PRO
MIRROR MOUNT PRO
ANTI VIBRATION MODULE
CHARGING ANTI VIBRATION MODULE

